

Program selection

Corresponding Program Code for the Three Models:

Rider 600—B05

Rider 900—C05

Rider Deluxe 1200—D05




STEP ③

"P" indicates the current program, " Press "+/-" to select program from B05, C05 and D05 ("C" is displayed), Press Timer button to confirm.

STEP ④

Unplug to retain the program you selected

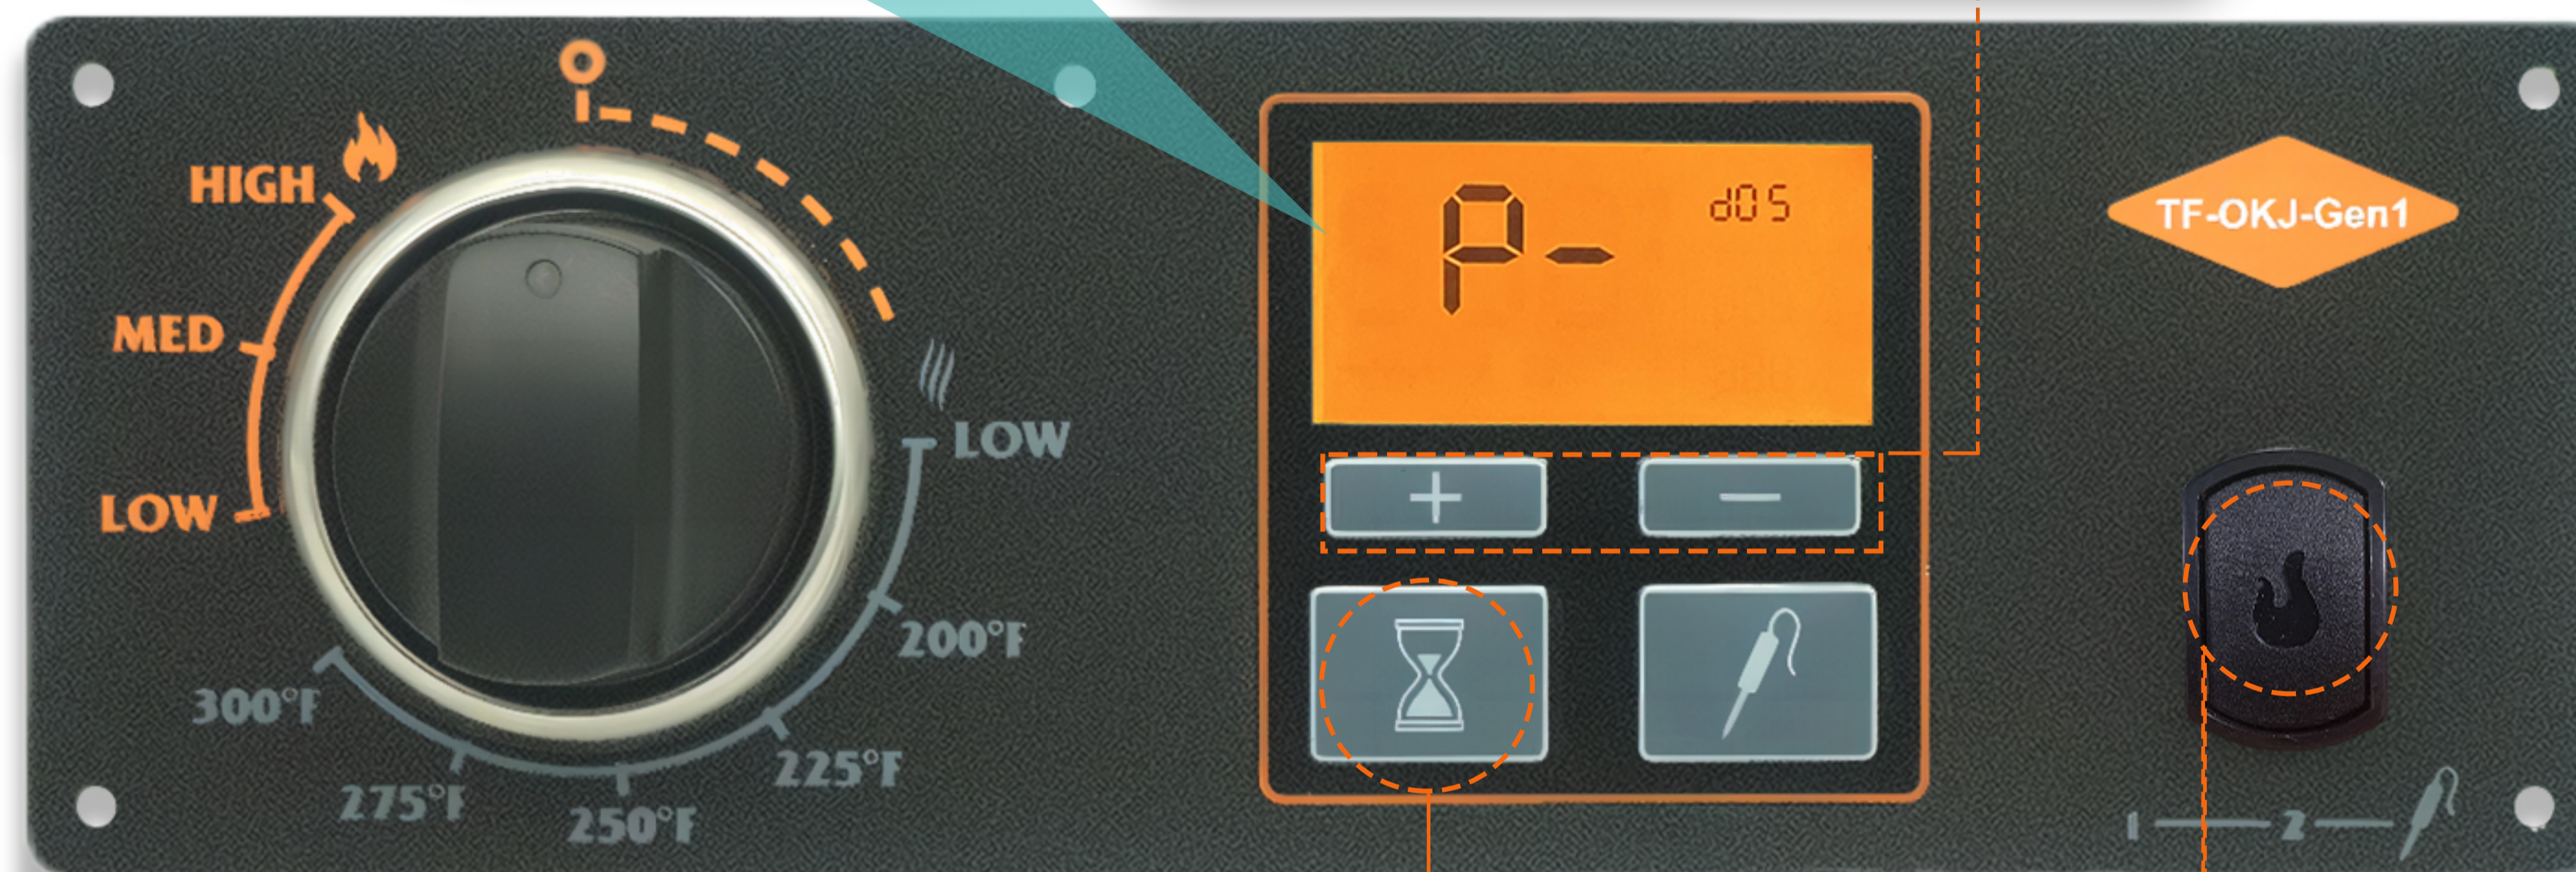

STEP ②

Press & hold the timer button and plug in

STEP ①

Press on the switch before plug in