

USER MANUAL

A10-WiFi CONTROLLER Replacement for Pit Boss

General Description:

The A10-WiFi Controller is the replacement control board for Pit Boss Wood Pellet Grill.

It can adapt to almost all Pit Boss wood pellet grills models that use rectangular controllers. We have added several practical features and 3 PID temperature control programs (A45, A70, A99) on top of the original controller, allowing you to better control the temperature of different models of grills and make even more delicious grilling food.

Illustration:



CONTROL	DESCRIPTION
	Power Button, press to start, press and hold to shut down.
	Press to toggle function menu, press and hold to switch temperature units between F/C.
	Press and hold the "Prime" Button to activate an extra feed of pellets to the Burn Pot. This can be used to add more fuel to the fire just before opening the barrel lid, resulting in a quicker heat recovery time. It can also be used to add more fuel while smoking, to increase the intensity of clean smoke flavor. Overfeeding the Burn Pot may damage to grill barrel paint.
	Timer, used to time counting or countdown.
	Indicates the desired smoke shift that has been selected.
	Indicates the meat probe temperature when probe is connected. "noP" displayed when meat probe is not connected.
	Indicate the grill (ambient) temperature.
	The set temperature and the actual temperature of the grill and meat probes are alternately displayed.
	Indicates the running status of Auger, Igniter and Fan respectively.
	Meat probe connection ports.
	Rotary Knob.
	The flashing WiFi indicator light signifies connection in progress, while a solid light indicates successful connection.

BLUETOOTH & WIFI CONNECTIVITY

New Function - APP Control (Scan to Download APP)



Before You Use

ABOUT PID TEMPERATURE CONTROLLING PROGRAMS:

Program Code	Cooking Surface Area Unit: SQIN	Grill Size	PID
A45	300-600	Small	YES
A70	600-900	Middle	YES
A90	900	Large	YES

NOTE: As the grill reaches the set temperature, the PID regulates it by cycling the auger and fan on and off, creating a "puffing" sound. This is normal.

OPERATING INSTRUCTIONS

➤ APP Control (Recommended, *Full guide: Wireless Setup Appendix*)

- Remote adjustment via smartphone;
- Real-time temperature monitoring.

Full guide: Wireless Setup Appendix

Quick Start Guide v1.0 (Controller Reset Functions)

➤ WiFi Reset

Use When: Reconnect to a new network.

Action:

1. Power ON controller;
2. Long press the rotary knob ≥5 seconds until feedback occurs.

➤ Factory Reset

Use When:

- Failed firmware updates (bricked controller);
- Unresponsive controller or restore original settings needed.

Action:

1. Unplug power cord completely;
2. Press and firmly hold the rotary knob;
3. Replug power while continuing to hold;
4. Keep holding until power LED changes from blinking to solid;
5. Release rotary knob when power LED remains solid.

➤ Manual Control

- Traditional knob operation;
- No WiFi required.

1. PID TEMPERATURE CONTROLLING PROGRAM SETTING

- (1) Press and hold the "Select" button when the unit is not energized (unplug);
- (2) Energize the unit (plug in) then release the "Select" button;
- (3) Press the "Power" button to enter the Program Setting Mode, the selected code is showed as "P-code figures"; the others are showed as "C-code figures";
- (4) Rotate the knob to choose a program code for your pellet grill;
- (5) After selecting the right program code for your pellet grill, press "Select" button to confirm, the selected program code will be showed as "P-A45, P-A70, P-A99", indicating the setting is done.
- (6) After confirming code ("P-AXX" shown), unplug the unit.

(Critical NOTE: Immediately unplug (Pull power cord from outlet)! DO NOT press "Power" button to shut down! (Pressing the Power button after selecting program code will cancel programming.)

- (7) Next time you plug in, the selected program code is displayed on the screen in the first second.

2. START

● BOOT:

Plug in, the Power button light flickers, indicating that the controller is in standby status, press the "Power" button to boot.

● SET THE GRILL TEMPERATURE:

"--" is showed on the screen indicating that you can set the desired grill temperature (it will exit setting if you do nothing in 5 seconds). Temperature can be set in units of 1 degree. (Temperature Setting Range: 180F-550F in A45 and A70. 180F-600F in A99) Press the **ROTARY KNOB** to enter temperature setting again, rotate the knob to set your desired temperature, then press the **ROTARY KNOB** to confirm.

3. SMOKE MODE:

● PID Version (A45, A70, A99):

There are 10 smoke shifts from P0-P9 to choose, the intensity of clean smoke flavor increases as the shift goes up. Smoke mode will be activated when the grill temperature is set below 180F, The temperature fluctuation range in Smoke Mode is within 145F-175F.

● SETTING STEPS:

Press the **ROTARY KNOB** to enter temperature setting, Turn the knob to adjust the temperature to below 180, press the **ROTARY KNOB** to confirm, "S" will be showed on the screen. the "P"SET icon lights on, "P-figures" flickers (it will exit setting if you do nothing in 5 seconds), now you can select "P0 to P9" and then press the **ROTARY KNOB** to confirm. You can also access to "P"SET via menu selecting, please refer to **MENU SELECTION**.

4. MENU SELECTION

Press the "Select" button to enter menu selection. The menu order will jump in the loop of "Timer setting - Smoke shift setting - Meat probe 1 target temperature setting - Meat probe 2 target temperature setting - Exit setting" (when a menu is unconfigurable, it will skip to the next menu). The corresponding display area flickers when you turn to a certain menu, press the **ROTARY KNOB** to enter the setting process.

● TIMER SETTING:

Press the "Select" button to toggle the menu, when the timer display area flickers, press the **ROTARY KNOB** to enter the timer setting. "J" or "γ" will be showed before the timer figures, "J" represents time counting, "γ" represents time countdown.

➤ **TIME COUNTING:** Press the **ROTARY KNOB** to enter counting or countdown setting, rotate the knob to choose "J", press the **ROTARY KNOB** to confirm, time counting starts.

➤ **TIME COUNTDOWN:** Press the **ROTARY KNOB** to enter counting/countdown setting, rotate the knob to choose "γ", press the **ROTARY KNOB** to confirm, the timer figures flicker, rotate the knob to set the hour, press the **ROTARY KNOB** to confirm, rotate the knob to set the minute, press the **ROTARY KNOB** to confirm, time countdown starts. When it count to 0, the buzzer beeps, press any keys to stop the beep.

➤ **COUNTING CANCEL:** Press "Select" button to toggle the timer menu, press the **ROTARY KNOB** to enter timer setting, press and hold **ROTARY KNOB for 3 seconds** to cancel.

● SMOKE SHIFT SETTING:

Press "Select" to toggle menu when the unit is in smoke mode (the "P"SET icon lights on), when "P"SET icon flickers, press the **ROTARY KNOB** to enter setting, rotate the knob to choose a smoke shift, press the **ROTARY KNOB** to confirm.

● MEAT PROBE TARGET TEMPERATURE SETTING:

You can set the meat probe target temperature only when the probe is inserted in the probe jack. Press "Select" to toggle menu, when "Probe 1 or 2" flickers, press the **ROTARY KNOB** to enter setting, rotate the knob to set target temperature (90F-250F), press the **ROTARY KNOB** to confirm. When the actual temperature of the meat probe reaches or is greater than that of the target temperature, the buzzer beeps. Press any key to dismiss the alerts, the meat probe target temperature is initialized.

5. REAL-TIME CIRCUIT MONITORING

The controller can automatically monitor the faults (e.g. bad contact, short circuit, open circuit, load current out of normal range) of its connected parts (Auger, Igniter and Fan).

● SYSTEM OFF:

This system is turned off by default. When it is off, if all connected parts are working normally, the corresponding icon does not light on. If the system finds that some of the connected parts is anomaly, the corresponding icon flickers, indicating that there is a problem with it. Make sure wire connections are firmly connected and dry, if it still does not work, replace the faulty part. If you are confident that the faulty part does not affect the proper operation of the grill, you can ignore the fault alert, by which, however, may cause the grill to run unstable or even a certain probability of burning the controller fuse.

● SYSTEM ON:

Press the "Select" and "Prime" buttons at the same time to activate the detection system when the controller is on. In this state, all connected parts icons are solid, indicating that all parts are running normally. When some part is detected anomaly, the corresponding icon flickers, the error code shows, the buzzer beeps, and the grill stops working. The controller is locked and inoperable. Power needs to be cut off, you should make sure wire connections are firmly connected and dry, if it still does not work, replace the faulty part.

● **NOTE:**

When the fault detection system is activated, if a part's current load is out of range, the controller will stop working. However, this doesn't always mean the part is fully damaged. You can bypass the "Fault Detection" by turning off the system to continue using the unit, but it's advisable to replace the faulty part soon to prevent unexpected issues if it fails completely.

6. "ACT" AND "SET" TEMPERATURE

The real-time and set temperature of the grill and meat probes are alternately displayed on the controller screen. When "ACT" icon lights on, the real-time temperatures of the grill and meat probes are displayed. When "SET" icon lights on, the set temperatures of the grill and meat probes are displayed.

7. SHUT DOWN

Do not cut the power supply right after you done use. **Cool down program** will be running in order to prevent cases such as fuel pipe scorched, ash stacking in burn pot and hopper backfire. This process will usually last 15 mins.

TROUBLESHOOTING


Problem	Cause	Solution
No Power Lights On The Control Board	Power Button	Press the Power Button. Try another attempt and hold for two seconds to verify connection.
	Not Connected To Power Source, GFCI Outlet Has Tripped	Ensure smoker is plugged into a working power source. Reset breaker. Ensure GFCI is a minimum 10 Amp service. Ensure all wire connections are firmly connected and dry.
	Fuse Blown On The Control Board	Remove cooking components from the main smoke cabinet. Turn the unit onto its side, and remove the screws on the rear side of the Control Board. Check the fuse for a broken wire or if the transparent fuse tubing has turned black. If yes, manually replace with a new fuse.
	Faulty Control Board	Control Board needs to be replaced.
No Power Lights On The Control Board	Power Button	Press the Power Button. Try another attempt and hold for two seconds to verify connection.
	Not Connected To Power Source, GFCI Outlet Has Tripped	Ensure smoker is plugged into a working power source. Reset breaker. Ensure GFCI is a minimum 10 Amp service. Ensure all wire connections are firmly connected and dry.
	Fuse Blown On The Control Board	Remove cooking components from the main smoke cabinet. Turn the unit onto its side, and remove the screws on the rear side of the Control Board. Check the fuse for a broken wire or if the transparent fuse tubing has turned black. If yes, manually replace with a new fuse.
	Faulty Control Board	Control Board needs to be replaced.
Fire In Burn Pot Will Not Light	Auger Not Primed	Before the unit is used for the first time or anytime the hopper is completely emptied out, the auger must be primed to allow pellets to fill the burn pot. If not primed, the igniter will timeout before the pellets ignite. Follow Hopper Priming Procedure.
	Auger Motor Is Jammed	Remove cooking components from the main smoke cabinet. Press the Power Button to turn the unit on, turn Temperature Control Dial to SMOKE, and inspect the auger feed system. Visually confirm that the auger is dropping pellets into the burn pot. If not operating properly, call Customer Service for assistance or a replacement part.
	Igniter Failure	Remove cooking components from the main smoke cabinet. Press the Power Button to turn the unit on, turn Temperature Control Dial to SMOKE, and inspect the igniter. Visually confirm that the igniter is working by placing your hand above the burn pot and feeling for heat. Visually confirm that the igniter is protruding approximately 13mm / 0.5 inches in the burn pot.
Flashing Dots On LED Screen	The Igniter Is On	This is not an error that effects the unit. Used to show that the unit has power and is in Start-Up mode (igniter is on). The igniter will turn off after five minutes. Once the flashing dots disappear, the unit will begin to adjust to the desired temperature selected.
Flashing Temperature On LED Screen	Smoker Temperature Is Below 65°C /150°F	This is not an error that effects the unit; however, it is used to show that there is some risk that the fire could go out

TROUBLESHOOTING

Problem	Cause	Solution
"ErH" Error Code	The Smoker Has Overheated, Possibly Due To Grease Fire Or Excess Fuel.	Press and hold the Power Button to turn the unit off. Once cooled, press the Power Button to turn the unit on, then select desired temperature. If error code still displayed, contact Customer Service
"Err" Error Code	Grill Temperature Probe Wire Not Making Connection	Access the electrical components on the base of the unit and check for any damage to the Grill Temperature Probe wires. Ensure the Grill Temperature Probe spade connectors are firmly connected, and connected correctly, to the Control Board.
"ErL" Error Code	Ignition failure	The pellets in hopper is insufficient, the feeding pipe is scorched and blocked, the hatch is closed
"Er1" Error Code	Igniter anomaly	Check the wiring, connect it firmly, If it doesn't work, change the damaged ignitor.
"Er2" Error Code	Auger anomaly	Check the wiring, connect it firmly, If it doesn't work, change the damaged auger.
"ErF" Error Code	Fan anomaly	Check the wiring, connect it firmly, If it doesn't work, change the damaged fan.
"noP" Error Code	Bad Connection At Connection Port	Disconnect meat probe from connection port on the Control Board, and reconnect. Ensure the meat probe adapter is firmly connected. Check for signs of damage to the adapter end. If still failed, call Customer Service for replacement part.
	Meat Probe Damaged	Check for signs of damage to the wires of the meat probe. If damaged, call Customer Service for replacement part.
	Faulty Control Board	Control Board needs to be replaced. Contact Customer Service for a replacement part.
Thermometer Shows Temperature When Unit Off	Smoker Has High Ambient Temperature Or Is In Direct Sun	This will not harm the smoker. The internal temperature of the main cabinet has ambiently reached or exceeded 54°C / 130°F. Move the smoker into a shaded area. Prop the cabinet door open to reduce the internal temperature.
Smoker Will Not Achieve Or Maintain Stable Temperature	Insufficient Air Flow Through Burn Pot	Check burn pot for ash build-up or obstructions. Check fan. Ensure it is working properly and air intake is not blocked. Follow Care and Maintenance instructions if dirty. Check auger motor to confirm operation, and ensure there is no blockage in the auger tube. Once all the above steps have been done, start the smoker, set temperature to SMOKE and wait for 10 minutes. Check that the flame produced is bright and vibrant.
	Lack Of Fuel, Poor Fuel Quality, Obstruction In Feed System	Check hopper to check that fuel level is sufficient, and replenish if low. Should the quality of wood pellets be poor, or the length of the pellets too long, this may cause an obstruction in the feed system. Remove pellets and follow Care and Maintenance instructions.
	Temperature Probe	Check status of temperature probe. Follow Care and Maintenance instructions if dirty. Contact Customer Service for a replacement part if damaged.
Smoker Produces Excess Or Discolored Smoke	Grease Build-Up	Follow Care and Maintenance instructions.
	Wood Pellet Quality	Remove moist wood pellets from hopper. Follow Care and Maintenance instructions to clean out. Replace with dry wood pellets
	Burn Pot Is Blocked	Clear burn pot of moist wood pellets. Follow Hopper Priming Procedure.
	Insufficient Air Intake For Fan	Check fan. Ensure it is working properly and air intake is not blocked. Follow Care and Maintenance instructions if dirty.


Wireless Setup Appendix

➤ Device Pairing Process 1.0

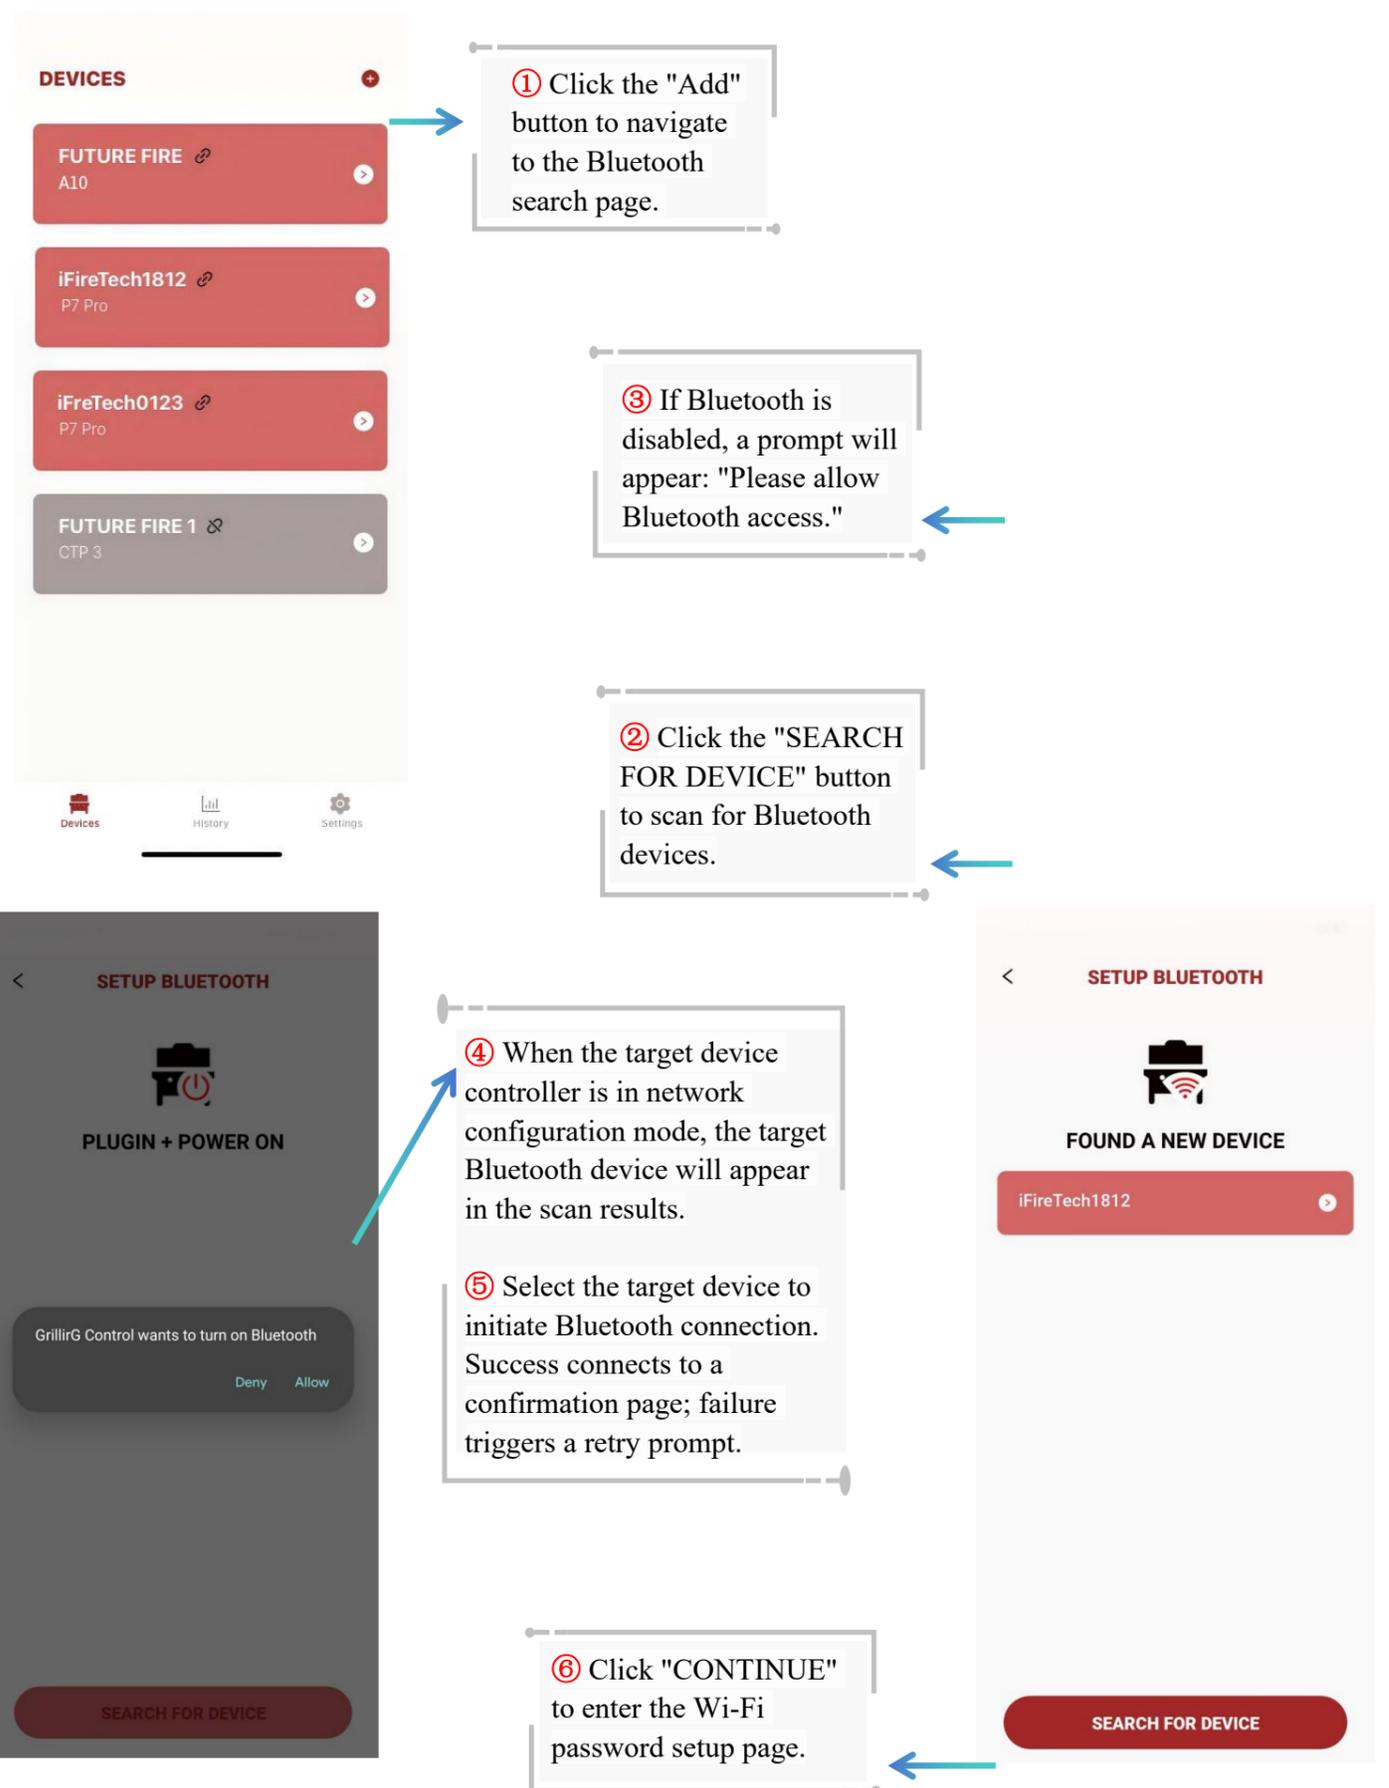

Wireless Setup Appendix

➤ Device Pairing Process 1.0

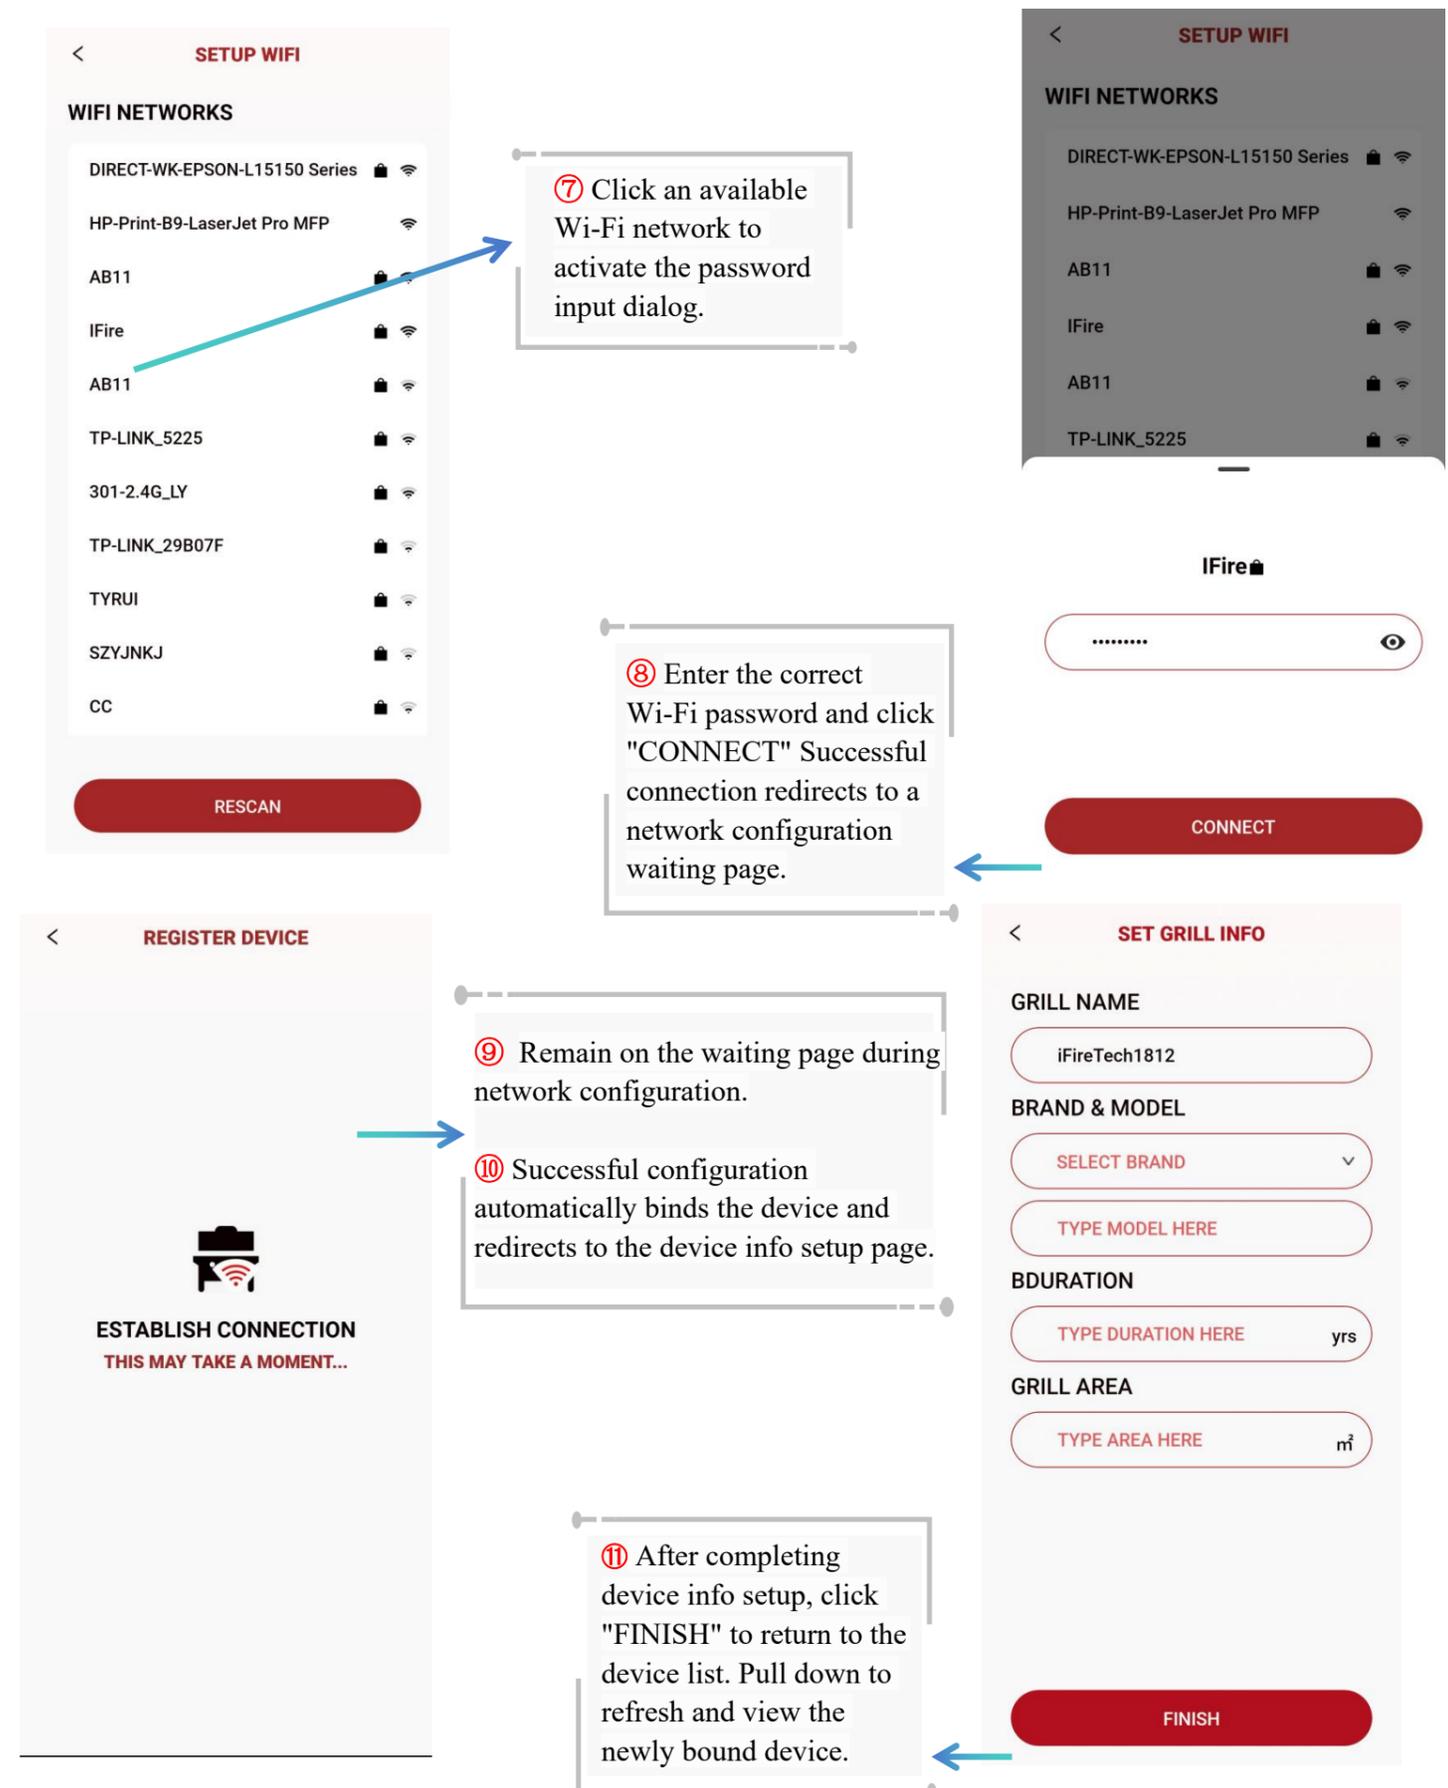

Wireless Setup Appendix

➤ Built-in Program Adjustment

① Click the "Add" button to navigate to the Bluetooth search page.

② Click "... " to navigate to the more settings page.

③ Click "BUILD-IN PROGRAM" to set the program.

④ Select a program code then click "OK". Unplug then plug in to complete the program setting

Wireless Setup Appendix

➤ Grill Control Hub (Error Alerts & Causes)

Error Alerts & Causes

Component Status Checks: *Potential Error Alerts & Causes*

- **IGNITION:**
 1. **FAULT:** Ignition rod not installed, rod specifications do not match, or circuit faults in the ignition rod section.
 2. **TIMEOUT:** Fails to heat up for a long time after entering working mode.
- **FAN**

FAULT: Fan not installed, fan specifications do not match, or circuit faults in the fan section.
- **MOTOR**

FAULT: Motor not installed, motor specifications do not match, or circuit faults in the motor section.
- **RTD TEMP**
 1. **ERROR:** Temperature probe not installed, probe specifications do not match, or circuit faults in the probe section.
 2. **OVER-LIMIT:** The Smoker Has Overheated, not controlled by the controller.

APP Control Guide

- **Standby | CONNECTED** (Current system status)
- **TEMPERATUR Section** (chamber temperature reading/setting)
- **SMOKE ON/OFF** (Smoke generating status)
- **STATUS**
IGNITION **OK** | FAN **OK** | MOTOR **OK** | RTD **OK** | BYPASS
- **SAFETY CONTROLS**
 1. **LOCK**
Screen lock to prevent accidental touches. Long press to UNLOCK.
 2. **SLIDE OFF**
Remote shutdown ONLY (Remote power-on is disabled for safety).
 3. **TIMING**
Programmable cooking timer with alerts.
Long press "TIMING" or "PAUSE" to CANCEL TIMING.
 4. **Meat Probes (PROBE 1# / PROBE 2#)**
Meat probes temperature reading/target temperature setting.

About BYPASS

- **BYPASS ON:**
If a component experiences a load (Fault), the controller can still be used. This function is applicable only to load anomaly in the ignition rod, fan motor, and auger motor.
- **BYPASS OFF:**
If a component load is anomaly (Fault) then the controller triggers an alarm (making it unusable), the bypass can now be activated to suppress the alarm. However, operating the equipment in bypass mode when anomaly load occurs may lead to unpredictable issues .

NOTE: Regardless of whether the controller is in **BYPASS** mode, it cannot be used in the case of **IGNITION (TIMEOUT)** and **RTD (ERROR, OVER-LIMIT)** states.

Official Site: <https://ifire-tech.com/> e-Mail: customer_service@ifire-tech.com